



DESCRIPTION



OPERATION



MAINTENANCE



SAFETY INSTRUCTIONS

You should be fully familiar with the proper and safe handling of your weapon. The basic principles of weapons safety require you to always apply the following rules when handling the firearm.

- Always treat a weapon as if it was loaded.
- Always put the safety of a weapon to "safe" when loading it so that there can be no unintentional discharge.
- Keep your finger away from the trigger. It should be straight and should rest on the trigger guard.
- Only use the kind of projectiles suitable for your weapon.
- Always keep the muzzle pointed in a safe direction.
- This weapon may only be discharged in your own property, on authorized shooting ranges and inside enclosed private property. It is to be made sure that no projectile can leave the enclosed property.
- Keep the danger area of the projectile in mind.
- Never transport a loaded weapon. Only load your weapon when you intend to fire it.
- Never aim your airgun at persons or animals. Avoid ricochets. Never fire at smooth, hard surfaces or water.
- Before you discharge your weapon, make sure that target and surrounding area are safe.
- Make sure that you always have full control over the muzzle of your weapon, even if you stumble or fall down.
- Safety shooting glasses should always be worn when firing the weapon.
- Always store your weapon in a safe place and in unloaded condition. Unauthorized persons (persons not familiar with the use of weapons, children) must not have access to it. Ammunition is to be kept in a separate place.
- This weapon and its instruction manual may only be passed on to persons
 - who are fully familiar with its use and
 - who have reached the legally stipulated minimum age in the respective country.
- Modifications or repairs of weapons are only to be effected by authorized agencies or by a skilled gunsmith.
- Never leave a loaded weapon unattended.
- Only unloaded weapons are to be handed over to another person.

REPAIR

A gun that does not work properly is dangerous. Repairing a gun by oneself is difficult and an incorrectly assembled gun can malfunction in dangerous ways.

Caution: Repairs should only be completed by authorized centres.



SAFETY/FIRE SELECTOR




⚠ CAUTION

- Only handle your gun in its safe condition.
- Always make sure that the muzzle points in a safe direction.




⚠ CAUTION

Please also always observe the legal regulations effective in your country for the use of arms.



S-E-F Trigger group

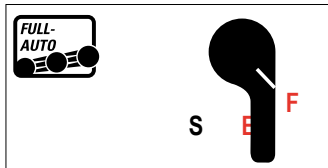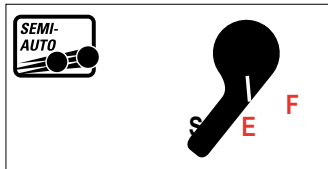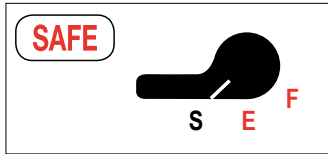



Pictogram Trigger group

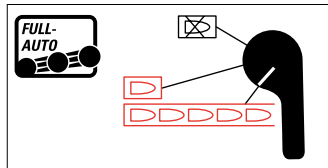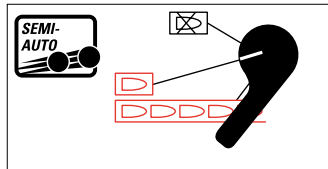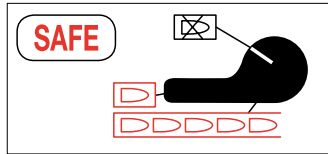

S-E-F Trigger group

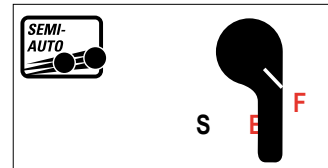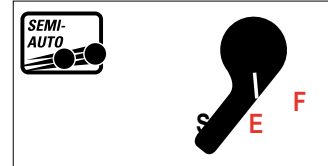

Pictogram Trigger group

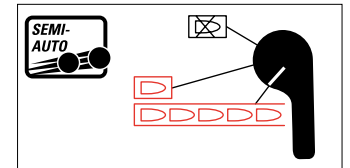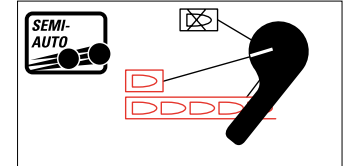

PROBLEM SOLUTIONS



PROBLEMS

- Faulty shooting direction
- Weapon does not shoot
- Low shooting speed

POSSIBLE CAUSES

	Safely activated	Gas / Magazine empty	Dirty barrel	Extreme temperatures	Wrong ammunition	Ammunition badly loaded	Weapon not cocked	Sight not properly adjusted
Faulty shooting direction			●	●	●	●		●
Weapon does not shoot	●	●				●	●	
Low shooting speed			●	●	●	●		





LOADING THE MAGAZINE


EN

NOTE

If you load BBs while shooting, you do not have to cock the rifle again.

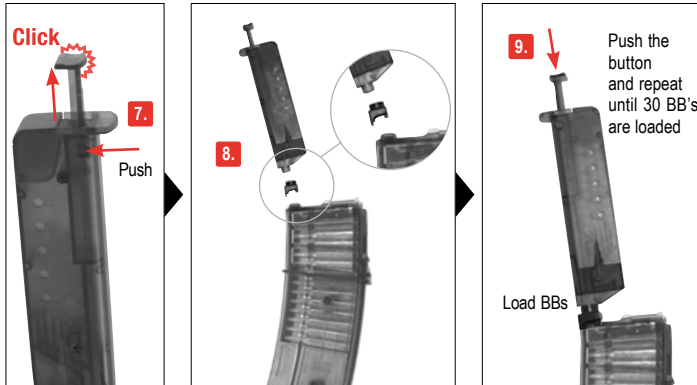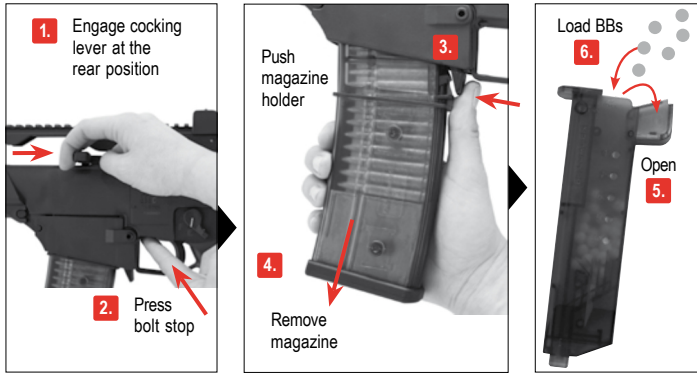

CAUTION

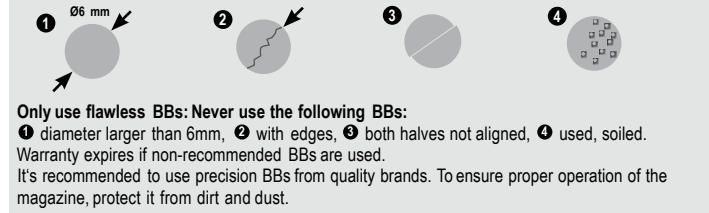




CHARGING OF GAS

⚠ CAUTION


- Keep hands and face at a safe distance from the escaping gas.

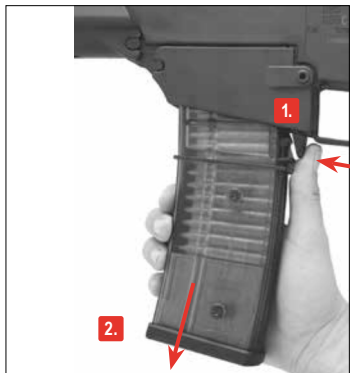

Press the magazine holder.
Pull out the magazine.

NOTE

Keep the magazine with gas tank tilted. Attach the gas flask vertically to the charging port of the magazine. Press the flask against the port. The magazine is fully charged when you observe a discharge of gas from the port.


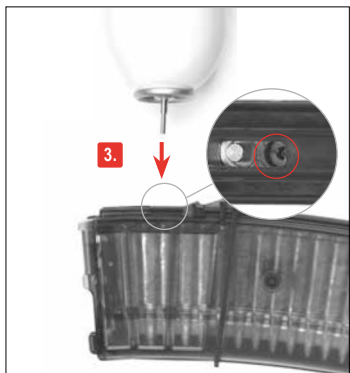


REMOVING OF GAS
Hold the magazine at its bottom. Press the valve. Residual gas may now be discharged.



ADJUSTABLE SHOOT UP

EN

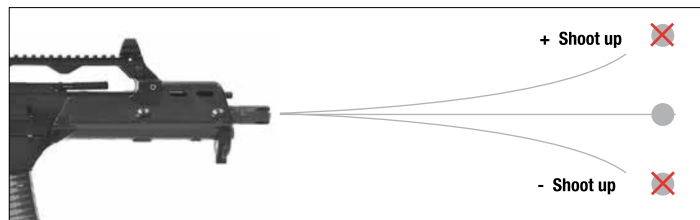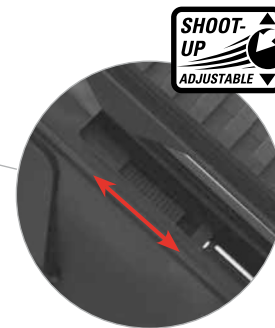



ADJUST THE DISTANCE / REARSIGHT




SCOPE


EN

Windage adjustment


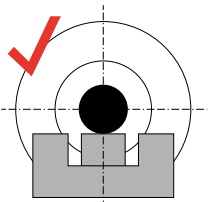
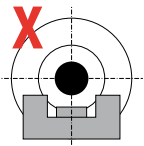
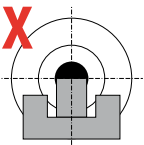
Turn

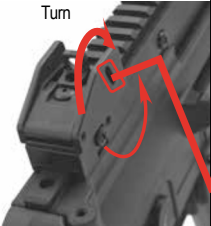

Shoot too far right:




Shoot too far left:







Elevation adjustment


2 mm Allen Key



Shoot too high:




Shoot too low:




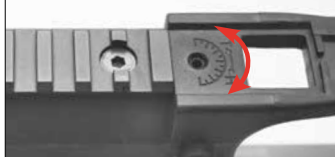
Scope magnification 3,5x

Elevation adjustment 2.6387/2.6387X G36K

Shoot too far high:




Shoot too far low:


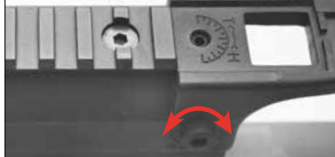



Windage adjustment 2.6387/2.6387X G36K

Shoot too far right:




Shoot too far left:




STOCK/ FIRING

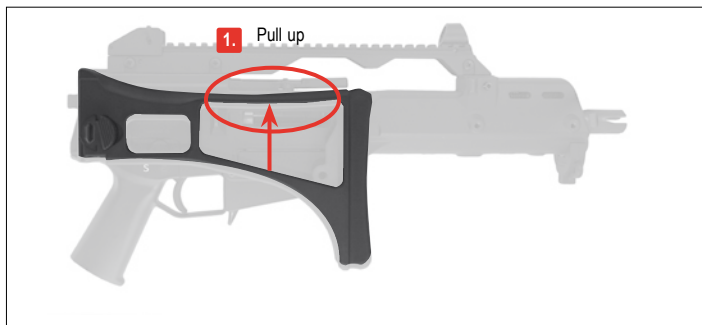

BARREL CLEANING

EN


⚠ CAUTION

Please do not switch the fire selector while pulling the trigger. This causes severe damage to your weapon.



⚠ CAUTION

- Do not force the rod into the barrel, as this could cause damage.
- Occasionally clean the metal parts on the outside. Use a cloth which has been slightly dampened with some weapon oil.
- Never drip silicone oil directly into the barrel.

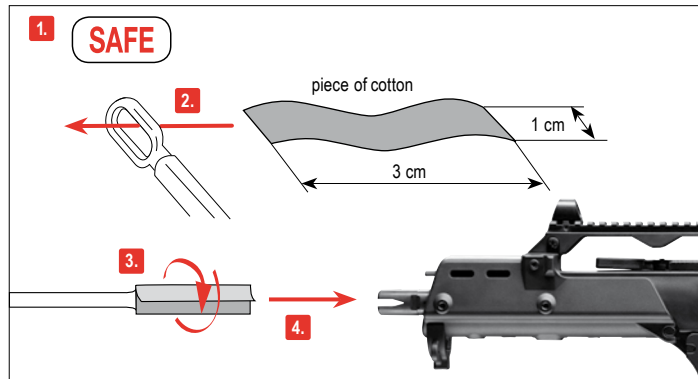

Put the safety on "safe". Prepare a thin rod with a length of approx. 50 cm. Attach a piece of cotton fabric to its end and clean the barrel with some silicone oil.