

DEFCON AIRSOFT

GBB AIRSOFT GUN | cal. 6 mm

Owner's manual •



GBB AIRSOFT GUN | cal. 6 mm

VELOCITY
290fps

VELICITÀ
VELOCITÀ

BLOW
BACK

SISTEMA CARICABOX
SISTEMA CARICABOX

GAS

GAS
GAS

20
ROUNDS

CARTE
TRUCI

METAL SLIDE

GLASSERIE A METAL
CORRENDE
METALICA

METAL
BARREL

CANONIA METAL
CARICABOX METALICA

SEMI-AUTO

SEMIAUTOMATICO
AUTOMATICO SEMI

6 mm
AIRSOFT

6mm

HOP-UP

REGOLABILE
HOPUP

READ THIS OWNER'S MANUAL COMPLETELY. This airsoft gun is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

⚠ WARNING THE AIRSOFT GUN IS NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE MAY CAUSE INJURY, ESPECIALLY TO THE EYE. EYE AND FACE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ THIS OWNER'S MANUAL BEFORE USING. MAY BE DANGEROUS UP TO 220 YARDS (200 METERS).



Buyer should be at least 18 years of age to purchase this airsoft gun. Read all instructions before using. The purchaser and user should conform to all laws governing the purchase, use and ownership of airsoft guns. Read the enclosed owner's manual carefully before loading or using the airsoft gun. Eye protection required.




WARNING

Follow the owner's manual carefully. Do not load a projectile into the airsoft gun until you are ready to shoot. If you do load a projectile and then decide not to shoot, remove it either manually or by shooting the airsoft gun at a safe target. An unloaded airsoft gun which is "ON SAFE" is safest. Accidents happen fast, please handle the airsoft gun safely.

Airsoft guns differ in their operation and you are never ready to fire any gun until you are thoroughly familiar with it. Read the following owner's manual thoroughly prior to operating.

These symbols and safety signal words, , , **NOTICE**, mark warnings, cautions, and notices in this operation manual. Carefully follow them for your own safety and the safety of others.

 **WARNING** Failure to follow the instructions and recommendations in this owner's manual may result in bodily injury.



**EYE PROTECTION
REQUIRED
WEAR YOUR
SHOOTING GLASSES**

Operating Procedures

1. Reviewing Safety
2. Learning the Parts of Your Airsoft gun
3. Operating the Safety
4. Charging with Gas
5. Handling and Storage of Gas
6. Loading and Unloading Projectiles
7. Aiming and Firing Safely
8. Adjusting the Hop Up
9. Maintaining Your Airsoft Gun
10. Trouble Shooting



 
1. Reviewing Safety

- You and others with you **MUST** wear shooting glasses to protect your eyes. If you wear reading glasses the lenses must be certified for impact resistance or you should wear safety glasses intended for use over normal optical reading glasses.
- You and others with you should always wear eye and face protection designed for airsoft guns.
- Always aim in a **SAFE DIRECTION**. Always keep the muzzle of the airsoft gun pointed in a **SAFE DIRECTION**. A **SAFE DIRECTION** is defined as always pointing the airsoft gun and/or the muzzle of the airsoft gun in a direction, in which if it were to discharge, it would not cause any injury or damage. Controlling where the muzzle or front of the barrel is pointed at all times, is very important.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- Never point the airsoft gun at anything you do not intend to shoot.
- Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.
- Never look down the barrel of an airsoft gun.
- Always keep the airsoft gun "ON SAFE" until you are ready to shoot.
- Always check to see if the airsoft gun is unloaded when getting it from another person or from storage.
- Use .24 caliber (6 mm) plastic BBs only.
- Never reuse ammunition.
- Do not shoot at hard surfaces or at the surface of water. The BB may bounce off or ricochet and hit someone or something you had not intended to hit.
- Do not shoot at fragile objects such as windows.
- Place the backstop in a location that will be safe should the backstop fail.
- Your backstop should be checked for wear before and after each use. All backstops are subject to wear and will eventually fail. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Do not attempt to disassemble or tamper with your airsoft gun. Unauthorized repairs or modifying the function of your airsoft gun in any way may be unsafe and will void your warranty.
- Before you store your airsoft gun, make sure it is unloaded and the power source is removed.
- Always store your airsoft gun in a secure location away from unauthorized users and separate from ammunition.

⚠ WARNING Do not brandish or display this airsoft gun in public – it may confuse people and may be a crime. Police and others may think it is a firearm. This could cause aggressive action that could lead to your death. Do not change the coloration and markings to make it look more like a firearm.



2. Learning the Parts of Your Airsoft Gun

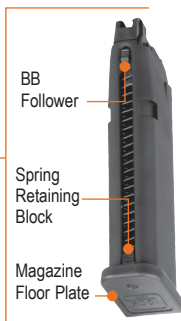



4. Charging with Gas

Use only quality low power airsoft gas eg Nuprol 1.0



 
1. Press the magazine release.
2. Remove the magazine.
3. Pull down the Spring Retaining Block.
4. Slide the Magazine Floor Plate forward.
5. Invert can and make sure charging nozzle is perpendicular to the valve stem (in gas reservoir). Press nozzle into magazine reservoir for 2-3 seconds. Repeat as necessary until reservoir is full. The magazine is fully charged when you observe a discharge of gas from the valve stem.





NOTICE Valve misalignment will cause excessive gas leak when charging gas and may result in an inadequate charge.

NOTICE For best performance, allow your airsoft gun magazine to reach room temperature before and during use. Rapid firing may cause gas in magazine to cool. If this occurs, remove magazine and allow magazine to warm to room temperature before continuing.

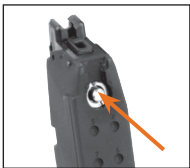

TO REMOVE GAS:

- Hold the magazine at the bottom.
- Press the gas valve.
- Residual gas will now be discharged.



6. Loading and Unloading Projectiles

⚠ CAUTION



Only use flawless BBs: Never use the following BBs:

① diameter larger than 6 mm, ② with edges, ③ both halves not aligned, ④ used, soiled.

Warranty expires if non-recommended BBs are used.

It's recommended to use precision BBs from quality manufacturers.

To ensure proper operation of the magazine, protect it from dirt and dust.

⚠ WARNING Use .24 caliber (6 mm) plastic BBs only in this airsoft gun. Use of any other ammunition can cause injury to you or damage to the airsoft gun.



1. Point the airsoft gun in a SAFE DIRECTION, and press the magazine release.
2. Remove the magazine.
3. Pull down and hold BB Follower.
4. Load BBs and release BB Follower slowly.
5. Insert the magazine.



**⚠ CAUTION**

Never assume that because the airsoft gun no longer fires a projectile and/or the magazine is removed from the grip frame that a projectile is not lodged in the barrel. Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.

⚠ CAUTION

You and others with you should always wear shooting glasses to protect your eyes. Always make sure that the muzzle points into a safe direction.

Removing a Jammed BB

- Make sure the airsoft gun is pointed in a SAFE DIRECTION.
- Remove the magazine by pressing down on the magazine release button.
- Insert a 6 mm (.24 caliber) ramrod into the muzzle end of the barrel and carefully push the jammed BB into the breech. The barrel could be damaged and the warranty will be void if the proper sized ramrod is not used.
- Hold the airsoft gun upright and shake until the jammed BB falls out.
- If you are not able to unjam your airsoft gun by following this procedure, take no further action. Contact Defcon Airsoft and ask for the service department.

⚠ CAUTION

Your backstop should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure. Always place the backstop in a location that will be safe should the backstop fail. Discontinue the use of a backstop if the projectile rebounds or ricochets.

NOTE: Many factors affect airsoft gun performance and velocity, including brand of projectile, lubrication, barrel condition and temperature.

⚠ WARNING You and others with you should always wear shooting glasses to protect your eyes.

7. Aiming and Firing Safely**⚠ CAUTION**

 
Do not shoot at hard surfaces or the surface of water. Projectiles may bounce off or ricochet and hit someone or something you had not intended to hit. Do not shoot at fragile surfaces such as glass or mirrors.

**CAUTION**

The slide blows back, meaning it shifts rearward. Keep hands and fingers away from pinch points.




- Always aim your airsoft gun in a **SAFE DIRECTION**. When you are sure of your target and backstop, and the area around the target is clear, squeeze the trigger to fire.
- Always choose your target carefully. Only targets which cannot be completely penetrated or which will not cause ricochets should be used.
- Your backstop should be checked for wear before and after each use. Replace your backstop if the surface is worn or damaged, or if a ricochet occurs.
- The airsoft gun is correctly aimed when the front sight blade is positioned exactly in the notch and even with the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bullseye should appear to rest on the top of the front sight.

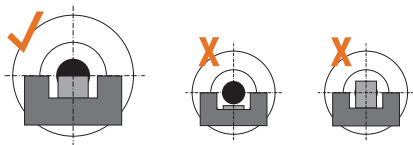

NOTICE When all the BBs have been fired, the slide will stay in the rear position. Press the slide stop lever to let the slide jump forward.




 8. Adjustable Hop Up

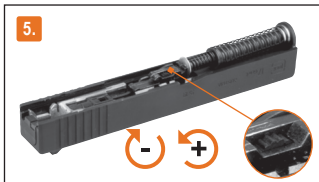

1. Press the magazine release.
2. Remove the magazine.
3. Cock the airsoft gun.
4. Pull the slide lock lever down on both sides and pull the slide forward off the frame.

 5. Adjust the Hop Up.
6. Push in the slide from the front and cock the airsoft gun.
7. Cock the airsoft gun.

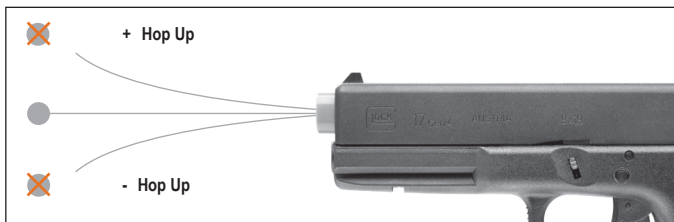

⚠ CAUTION

Always check to make sure the airsoft gun is unloaded when getting from storage or from another person.

⚠ WARNING

Do not try to take the airsoft gun apart. It is difficult to reassemble and improper disassembly or reassembly can cause injury.

⚠ CAUTION

 
Before any care, cleaning or maintenance, always be sure your airsoft gun is unloaded. Keep pointed in a safe direction. It is important to perform routine inspections and maintain your airsoft gun properly.

9. Maintaining Your Airsoft gun

With care and routine inspections your airsoft gun will provide many sessions of shooting enjoyment. Abuse, neglect and continued exposure to the elements will impair the performance of any airsoft gun. To ensure continued proper function, apply 1 to 2 drops of Elite Force Slick silicone oil onto all moving parts such as the BB Follower, gas valve and the trigger hinge (1000 shots).

NOTICE

Oils that contain acid or resin can damage seals and possibly the finish of the airsoft gun. Do not force the rod into the barrel, as this could cause damage. Never drip silicone oil directly into the barrel.

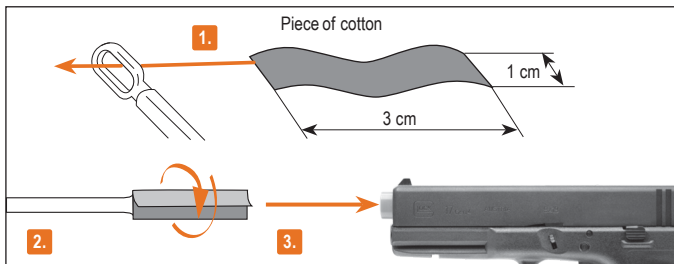

Prepare a thin rod with a length of approx. 30 cm. Attach a piece of cotton fabric to its end and clean the barrel with some silicone oil.

Occasionally clean the metal parts on the outside. Use a cloth which has been slightly dampened with Elite Force Slick Silicone oil.

10. Trouble Shooting

POSSIBLE CAUSES



PROBLEMS

	Gas / Magazine empty	Dirty barrel	Extreme temperatures	Wrong ammunition	Ammunition loaded incorrectly	Sight not properly adjusted
Does not shoot straight	●	●	●	●	●	●
Airsoft gun does not shoot	●		●	●	●	
Low shooting velocity	●	●	●	●	●	